

## WallBeds Australia Bookcase Assembly Instructions

Insert all cam locks into the following panels: Top, Bottom, Kick and Back.


Insert Cam pins into the following panels: Sides and the opposite side to the cam locks on the Top & Bottom Panels.

Attach the back panel (**H**) to one of the side panels (**G**) with the cam locks facing towards the back. Then attach the Top (**I**) ensuring the cam locks are facing UP. The Cam pins on the Top panel should also be attached to the Back panel. Then attach the Bottom (**I**) with the cam locks facing down and the cam pins should also attach to the back back. Attach the Kick panel (**K**) Tighten all cam locks using a Phillips head screw driver (*not a power tool*) Then attach the remaining Side panel (**H**) Tighten all cam locks using a Phillips head screw driver (*not a power tool*)

Ensure all finished edges are also facing the same way.

Stand the book shelf up & now fix it to the side panel of the assembled Bed Cabinetry using the 28mm wood screws supplied. It is recommend that you use some of the pre-drilled shelf pin holes. Ensure that the front edge of the bookcase is flush with the front edge of the Bed Cabinet.

Press the shelf pins into the shelf pin holes at the desired height for your shelves. Then simply place your shelf on them. If you find it's too high or too low for the books you want to store, it's an easy matter to adjust the shelf by moving the supports to the holes at the required height

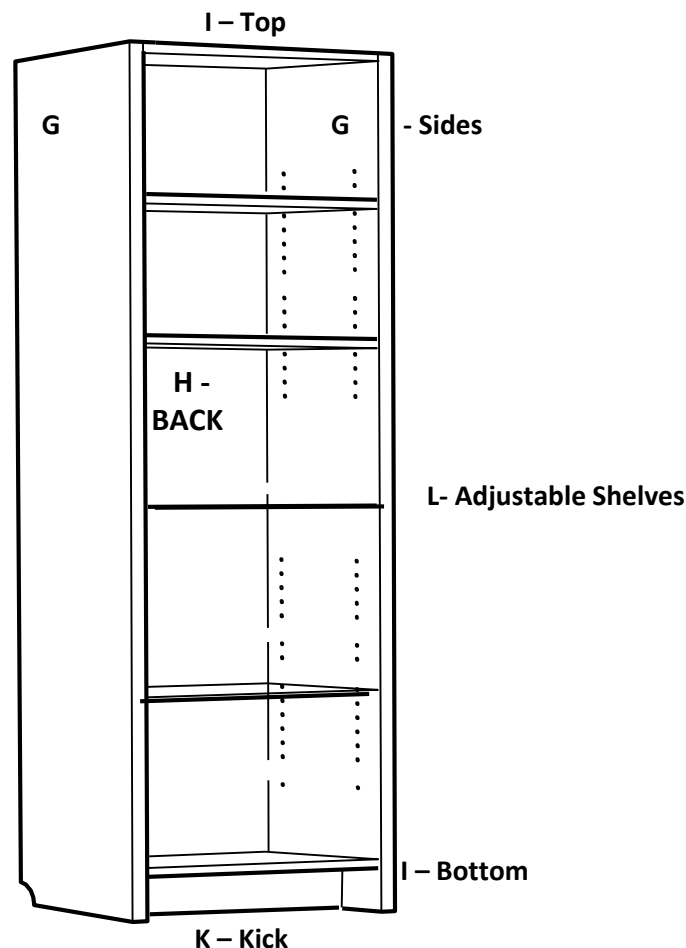

<b>Instructions Part Reference For Each Panel</b>	<b>Bookcase Panels</b>	<b>Sticker Description On Each Panel</b>
<b>G</b>	Side Bookcase Panels	Wall 1 Door - End L/R
<b>H</b>	Bookcase Back Panels	Wall 1 Door - Back
<b>I</b>	Top & Bottom Panels	Wall 1 Door - Top / Bottom
<b>L</b>	Adustable Shelves	Wall 1 Door - Shelf Adj